

CRC-18

Reference Chart

Brand	Model
Canon	ES 410V, ES 50, ES 55, ES 60, ES 65, ES 400V, ES 420V, ES 4000, ES 6500, ES 7000, ES 8200, ES 8100, ES 190
Hitachi	VMH 955LA, VMH 855LA, VME 565LA, VME 555LA, VMH 650A, VMH 665LA, VMH 675LA, VMH 755LA, VMD 865LA, VMD 875LA, VMD 965LA, VMD 975LA, VMH 765LA
JVC	GR DVF11, GR AXM225, GR DV3000, GR DV800, GR SXM330U, GR DV500, GR DVA1U, GR DVL120, GR DVL320, GR DVF21, GR AX841, GR DVF10U, SX960U, GR SXM730U, GR SXM930U, GR AXM230U, GR DVF31, GR AXM17, GR AX760, GR SXM37, GR AX240, GR SXM260, GR AX970, GR AX960, GR AX930, GR AX890, GR AX851, GR AX850, GR AX840, GR AX750, GR AX730, GR AX720, GR AX640, GR AX880
Panasonic	PV DV901, PV DV601, PV DV701, PV DV702, PV DV710, PV DV800, AG EZ50U, AG EZ1, PV DV953, PV DV952, PV DV851, PV DV950, PV DV852, PV DV400, PV DV951, PV L501, PV DV600, PV L651, PV L650, PV L601, PV L552, PV L750, PV L550, PV L751, PV L454, PV L453, PV L452, PV L353, PV L352, PV L354, PV L551, PV DV102, PV DV401, PV DV402, PV DV351, PV DV203, PV DV202, PV L652, PV DV103, PV DV101, PV DV100, PV DV52, PV DV51, PV D300, PV D301, PV L850, PV DV201
Samsung	SC W62, SC M51, SC L610, SC L520, SC L650
Sharp	VL WD650U, VL WD450U, VL WD255U, VL WD250U
Sony	DCR TRV58, DCR TRV140, DCR TRV130, DCR TRV108, DCR TRV98, DCR TRV88, DCR TRV87, DCR TRV230, DCR TRV67, DCR TRV330, DCR TRV58, DCR TRV57, DCR TRV37, HDR HC1, DCR TRV68, DCR TRV608, HDR A1, DCR TRV840, DCR TRV830, DCR TRV820, DCR TRV740, DCR TRV310, DCR TRV720, DCR TRV240, DCR TRV530, DCR TRV520, DCR TRV517, DCR TRV340, DCR TRV320, DCR TRV308, DCR TRV730