

# RC-10

## Reference Chart

Brand	Model
Canon	XL HD1 [(HDV)] , XL1, XL2, XL1S
Ikegami	HDK 79EC
JVC	GY-DV700 [700WU, 700WE] , GY-DV550 [550U, 550E] , GY-X3U [W/AB BATTERY ND WIRELESS] , GY-DV500 [500U, 500E] , GY-X2 [W/AB BATTERY ND WIRELESS] , GY-HD100U [(HDV)]
Panasonic	AG DVC15, AG-DVC200, AG-450, AG-456, AG-455, AG DVC10, AG-460, AG-DVC60, AG DVC7
Sony	DSR-500, DSR-390, DSR-370, DSR-300, DSR-200, VX9000E, DSR-250, DNW-7 [7P (SX)] , DNW-9WS [(SX)] , DNW-90 [90P, 90WS, 90WSP (SX)] , DSR-570