

RC-HD-3

Reference Chart

Brand	Model
Hitachi	SK-3000 [3000P] , SK-2700 [2700P, 2700PW] , SK-2000 [2000P F3, 2, 1, 38 W/BETA] , Z-ONE [A, B, C, D W/BETA] , Z-4000 [4000W] , Z-2010A, Z-3000 [3000W] , SK-888
Ikegami	HL 60W, HL V79W, HDL V90, HL V77 [77W] , DNS 21 [21W] , HL 59 [W / WNA] , HL 57, HL 53 [A] , HL 45 [A/W] , HL 43 [A] , HL 395, HC 390 [W/BETA, W/S-VHA, W/MII, W/HI-8] , HC 400 [400W] , HDK 79E [79EX] , DNS 33W (Editcam3), DNS 201 [201W] , HDL 0101, HL 55 [A / NA / NAs] , HDK 79EC, HDK 75EX, HDK 725P, HK 399PW, HL DV7W
JVC	GY-DV5100 [DV5100U]
Panasonic	AJ-HDC27 [27A (VARICAM)] , AJ-HDC20 [20A] , AJ-SDX900, AJ-HDX400, AJ-SDC915, AJ-SDC615, AJ-SPX800 [P2 Series] , AJ-DP800
Sony	EVW-300, DVW-700, DVW-707, UVW-100, DVW-790 [790WS] , DSR-450WSP, DXC-D35 [W/DSR-1] , DSR-400P, DVW-709 [709WS] , DXC-537A [PVW, W/BETA, W/HI-8] , HDW-900, DXC-PVW637 [W/BETA] , DXC-D35 [W/PVV-3, BVV-5, DNV-5] , DXC-D30 [637, W/BVV-5, W/PVV-3] , DXC-D30 [637, W/PVV-1, W/DSR-1] , PDW-530P (XDCAM), PDW-510P [(XDCAM)] , BVP-3 [3A, W/BETA] , BVP-30, BVP-5, BVP-50, HDW-730, DXC-327 [PVW, W/BETA, W/HI-8] , BVP-7A, HDW-750, MSW-900P (IMX), BVW-D600, BVW-400, BVP-550, BVW-200, BVP-950, E-10, BVP-90, BVW-300, HDW-700, BVP-70
Thomson	LDK-400, LDK-300, LDK-4000 (HD), 1407, LDK-93 [W/BTS BCB-5] , 1490 [1490WSP] , 1657 [W/SONY/BVV-5] , LDK-500, LDK-110, LDK-700, LDK-1707, LDK-91 [W/BTS BCB-5] , LDK-90 [W/BTS BCB-5] , LDK-9P [W/BTS BCB-5] , PDK-537A [W/BCB-5, BETA SP] , LDK-150, LDK-120, LDK-100, LDK-491, LDK-391, LDK-6000HD, LDK-140